


Core Winding  
 NI = Input  
 NO = Output  
 NR = Reset

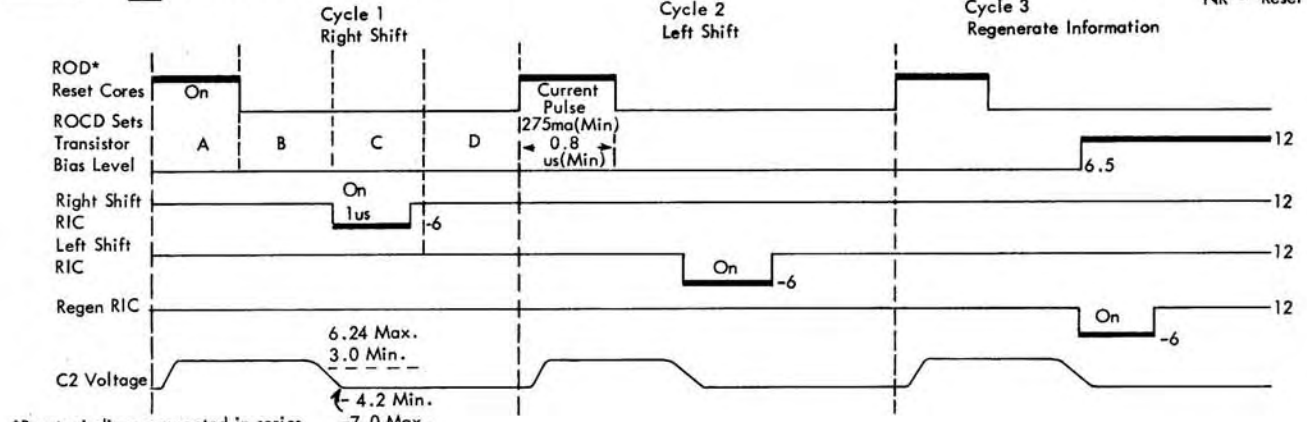

\*Reset windings connected in series