


FLOW CHART

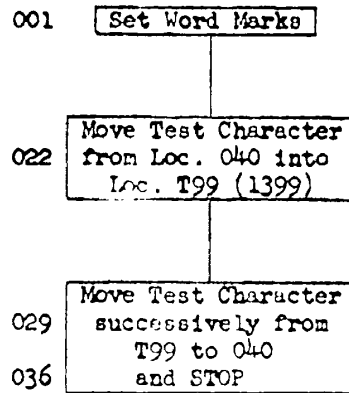

Testing without Using the Reader

The test can be conducted without using the reader by loading the following manually:

Inst.	INSTRUCTIONS		Remarks
Addr.	Op	A B	
029	M	T99 T98	The hundreds position (?) will vary depending upon the capacity of the machine tested.
036		029	Stop Op. Press Start Key to repeat.
040			Word Mark.
T99			Test character (1, 2, 4, 8, A, B, D, or G) without a word mark in the highest location.

After running the program, check for the test character in Location 040.