

Checking Procedure

SENSE SWITCH E ON - Machine stops for errors.

1. Remove the last card in the stacker.
2. Visually check columns 2 and columns 22-24 with Locations 202 and 222-224 respectively; also check column 50 with Locations 250 and 456.
3. Restart the program at Location 456 in the Single-Cycle mode. During Single-Cycle Process console indicating lights will display the contents of the OP, I Address, B Address, A and B Registers, and the logic unit.

When Location 250 has a "B", Location 456 must also have a "B" and the program should branch to Location 456.

When Location 250 has an "N", Location 456 must also have an "N" and programming continues with Location 460.