

Checking Procedure

SENSE SWITCH E ON - Machine stops for errors.

1. Remove the last card in the stacker.
2. Visually check columns 1, 21-24, and 41 with Locations 201, 221-224, and 241 respectively.
3. Restart the program at Location 458 in the Single-Cycle mode. During Single-Cycle Process console indicating lights will display the contents of the OP, I Address, B Address, A and B Registers, and the logic unit.

When Location 224 has an * or % character, it should also have a word mark.

When Location 041 is blank the program should branch to Location 493;

When Location 041 is not blank the program continues with Location 466.