

PROGRAM LISTING

MOVE COMPARE BLOCK 0200A

,008012,019,026030L0653681001,008012,001100113361080A8421/340080 1 OF 2 0200A 02  
 ,037044N000,340344,348349,357,361368/333080 PROG. CHAIN. ROUTINE 2 OF 2 0200A 03  
 L057S4510012,049L0772772/2772#/40/60#/80L/892702/2702413 CARD 1 OF 3 0200A 04  
 ,C19026,033,040044,051051/340001 TITLE PRINT ROUTINE CARD 2 OF 3 0200A 05  
 ,S01S05,S12,S13S17,S18S25,S29S36,S37S41,S45/333080 CARD 3 OF 3 0200A 06

LOAD	INST	ADDR	ADLR	OP	A	B	REMARKS	
		396	377	B	389		USE WHEN TESTS ARE RUN FROM TAPE	07
		404	385	B	S6E		..	08
		408	389	N	000		..	09
		412	393	M	360	392	..	10
		419	400	/	332		START TEST	11
		423	404	/				12
		424	405	B	S00	S521	BR TO TITLE PRINT ROUTINE IF 1 IN S52	13
		432	413	/	030		CLEAR READ AREA	14
		436	417	B	348		BRANCH TO PROGRAM CHAINING ROUTINE	15
		440	421	,	001	078	LOAD PRINT AREA	16
		447	428	L	080	299	..	17
		454	435	L	072	272	..	18
		461	442	,	241	270	..	19
		466	449	M	210	270	MOVE OP WITH CHAINING	20
		475	456	M			..	21
		476	457	B	449	B	B ON TO SCOPE	22
		481	462	D	270		TEST FOR ERROR	23
		485	466	C	270	250	..	24
		492	473	B	900	/	BRANCH TO ERROR PRINT ROUTINE IF UNEQ	25
		497	478	B	950	C	C ON TO CORRECT PRINT ROUTINE	26
		502	483	B	958		BRANCH TO SENSE D	27
		919	900	L	/14	285	BEGIN ERROR PRINT ROUTINE	28
		926	907	B	916	E	E ON TO ERROR STOP	29
		931	912	2	958		ERROR PRINT	30
		935	916	.	958		ERROR STOP	31
		939	920				WORD MARK	32
		969	950	L	/19	285	CORRECT PRINT ROUTINE	33
		976	957	2			..	34
		977	958	B	421	D	D ON TO REPEAT	35
		982	963	B	417		BRANCH TO READ NEXT RECORD	36
		/29	/10	E	RRO	R	CONSTANTS	37
		/34	/15				..	38
		/39	/20	A	FI	ELD	..	39
		/59	/40	B	FI	ELD	..	40
		/79	/60	R	ESU	LT SHOULD BE	..	41
		/99	/80	R	ESU	LT IS	..	42
		019027,031,0380420031T98#B400L046352BW04BS88					MOVE COMPARE	0200A 43
		1111111111					DETAIL CARDS	
		2222222222					1111111111	0200A 44
		4444444444					2222222222	0200A 45
							4444444444	0200A 46

0200A-4

DATE								
ENG. CHG. NO.								