

PROGRAM LISTING

MOVE & ZERO SUPPRESS BLOCK 0230A

,008012,019,026030L0653681001,008012,001100118361080AB421/340080 1 OF 2 0230A 02
 ,037044N000,340344,348349,357,361368/333080 PROG. CHAIN. ROUTINE 2 OF 2 0230A 03
 L057S4510012,049L0772772/2772□/40/60□/80L/892702/2702413 CARD 1 OF 3 0230A 04
 ,019026,033,040044,051051/340001 TITLE PRINT ROUTINE CARD 2 OF 3 0230A 05
 ,S01S05,S12,S13S17,S18S25,S29S36,S37S41,S45/333080 CARD 3 OF 3 0230A 06

LOAD	INST	ADDR	ADDR	OP	A	B	REMARKS	
396	377	B	389				USE WHEN TESTS ARE RUN FROM TAPE	07
404	385	B	S88				''	08
408	389	N	000				''	09
412	393	M	360	392			''	10
419	400	/	332				START TEST	11
423	404	/						12
424	405	B	S00	S521			BR TO TITLE PRINT ROUTINE IF 1 IN S52	13
432	413	/	080				CLEAR READ AREA	14
436	417	B	348				BRANCH TO PROGRAM CHAINING ROUTINE	15
440	421	,	001	078			LOAD PRINT AREA	16
447	428	L	080	299			''	17
454	435	L	072	272			''	18
461	442	,	241	265			''	19
468	449	B	480	010			BR TO MOVE 1 POS FLD IF BLANK IN 010	20
476	457	Z	210	270			MOVE & ZERO SUPPRESS 10 POS FIELD	21
483	464	B	457	B			B ON TO SCOPE	22
488	469	C	270	250			TEST FOR ERROR	23
495	476	B	499				''	24
499	480	Z	201	261			MOVE & ZERO SUPPRESS 1 POS FIELD	25
506	487	B	480	B			B ON TO SCOPE	26
511	492	C	261	241			TEST FOR ERROR	27
518	499	B	900	/			BRANCH TO ERROR PRINT ROUTINE IF UNEQ	28
523	504	B	950	C			C ON TO CORRECT PRINT ROUTINE	29
528	509	B	958				BRANCH TO SENSE D	30
919	900	L	/14	285			BEGIN ERROR PRINT ROUTINE	31
926	907	B	916	E			E ON TO ERROR STOP	32
931	912	Z	958				ERROR PRINT	33
935	916	.	958				ERROR STOP	34
939	920						WORD MARK	35
969	950	L	/19	285			CORRECT PRINT ROUTINE	36
976	957	Z					''	37
977	958	B	421	D			D ON TO REPEAT	38
982	963	B	417				BRANCH TO READ NEXT RECORD	39
/29	/10	E	RRO	R			CONSTANTS	40
/34	/15						''	41
/39	/20	A	FI	ELD			''	42
/59	/40	B	FI	ELD			''	43
/79	/60	R	ESU	LT SHOULD BE			''	44
/99	/80	R	ESU	LT IS			''	45
,019027,031,0380428031T98#B400L046352BW04BS88							MOVE & ZERO SUPPRESS	0230A 46

0230A-4

DATE							
ENG. CHG. NO.							