

PROGRAM LISTING

MOVE RECORD BLOCK 3110C

,008012,019,026030L0653601001,008012,001100118361080A6421/340080 1 OF 2 3110C 02
 ,037044N000,340344,348349,357,361368/333080 PROG. CHAIN. ROUTINE 2 OF 2 3110C 03
 L057S4510012,049L0772772/27720/40/60M/80L/892702/2702413 CARD 1 OF 3 3110C 04
 ,019026,033,040044,051051/340001 ,TITLE PRINT ROUTINE CARD 2 OF 3 3110C 05
 ,S01S05,S12,S13S17,S18S25,S29S36,S37S41,S45/333080 CARD 3 OF 3 3110C 06

LOAD	INST	ADDR	ADDR	OP	A	B	REMARKS	
396	377	B	389	S	571		USE WHEN TESTS ARE RUN FROM TAPE	07
404	385	B	388				..	08
408	389	N	000				..	09
412	393	M	360	392			..	10
419	400	/	332				START TEST	11
423	404	/						12
424	405	B	500	S	521		BR TO TITLE PRINT ROUTINE IF 1 IN S52	13
432	413	/	080				CLEAR READ AREA	14
436	417	B	348				BRANCH TO PROGRAM CHAINING ROUTINE	15
440	421	,	001	078			LOAD PRINT AREA	16
447	428	L	080	299			..	17
454	435	L	072	272			..	18
461	442	L	010	250			..	19
468	449	,	205	210			..	20
475	456	,	266				..	21
479	460	P	201	261			MOVE RECORD	22
486	467	P					..	23
487	468	B	460	B			B ON TO SCOPE	24
492	473	V	485	2661			TEST FOR ERROR	25
500	481	B	900				..	26
504	485	□	266				..	27
508	489	C	270	250			..	28
515	496	B	900	/			BRANCH TO ERROR PRINT ROUTINE IF UNEQ	29
520	501	B	950	C			C ON TO CORRECT PRINT ROUTINE	30
525	506	B	958				BRANCH TO SENSE D	31
919	900	L	/14	285			BEGIN ERROR PRINT ROUTINE	32
926	907	B	916	E			E ON TO ERROR STOP	33
931	912	2	958				ERROR PRINT	34
935	916	.	958				ERROR STOP	35
939	920						WORD MARK	36
969	950	L	/19	285			CORRECT PRINT ROUTINE	37
976	957	2					..	38
977	958	B	421	D			D ON TO REPEAT	39
982	963	/	280				CLEAR	40
986	967	/	080				..	41
990	971	B	417				BRANCH TO READ NEXT RECORD	42
/29	/10	E	RRD	R			CONSTANTS	43
/34	/15						..	44
/39	/20	A	FI	ELD			..	45
/59	/40						..	46
/79	/60	R	ESU	LT SHOULD BE			..	47

3110C-5

DATE								
ENG CHG NO								