


2. Switch A ON - no cards in hopper

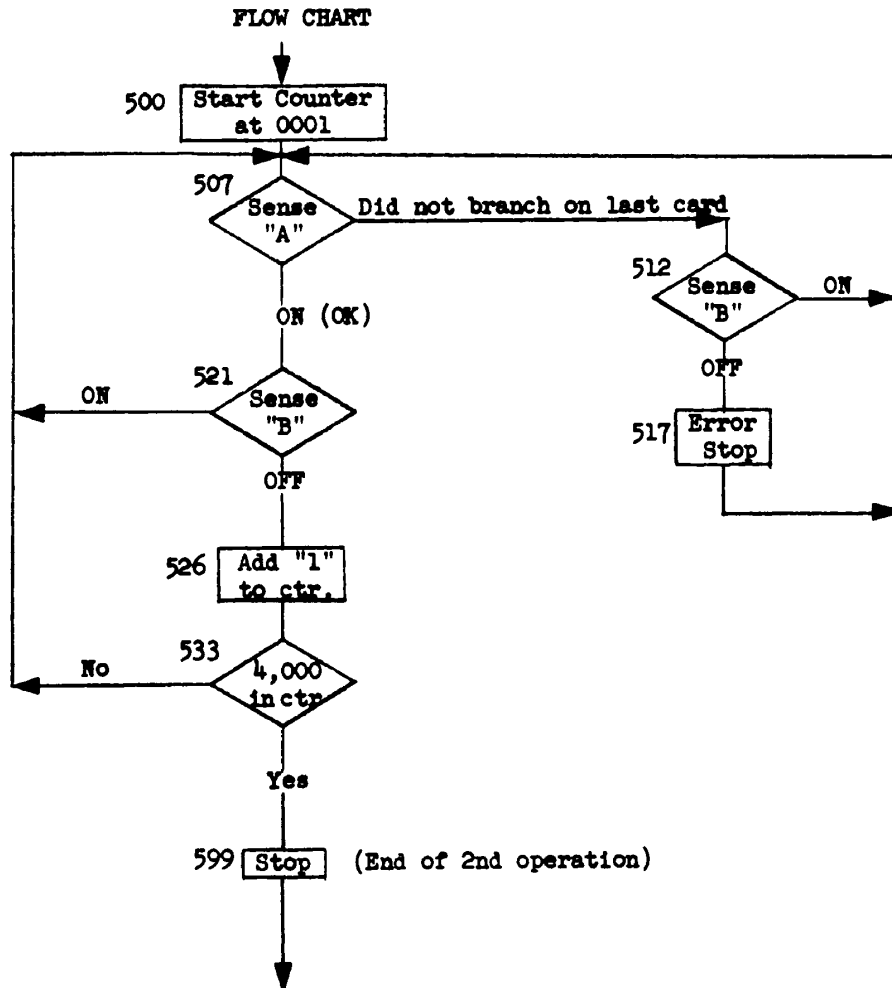

To continue with 3rd operation:

Set Switch A OFF
Press Start Key