


3. Switch A OFF - no cards in hopper

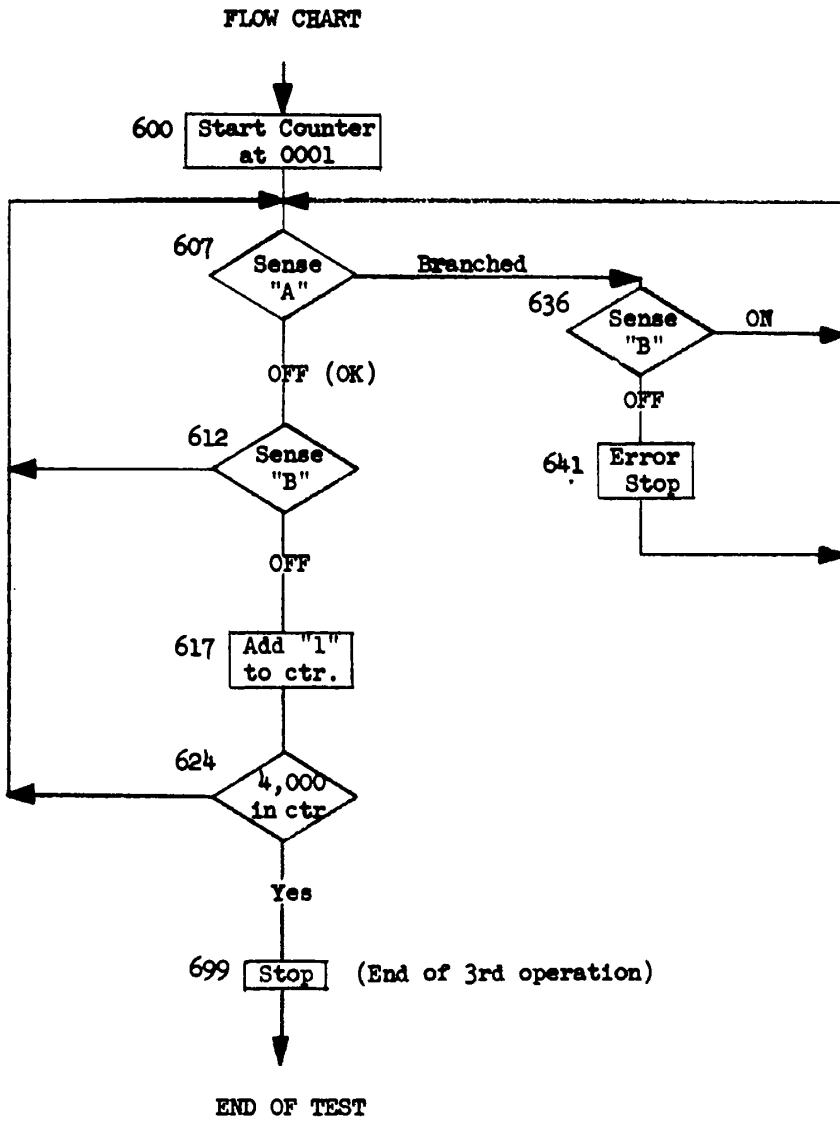

To repeat 2nd and 3rd operation:

Set Switch A ON
Press Start Key