

1401 DATA PROCESSING SYSTEM
DIAGNOSTIC FUNCTION TEST

1418 - 1428 METER CHECK-OUT

THE FOLLOWING PROGRAM IS LOADED WITH THE MAIN PROGRAM.

1040 U 352 E
 1045 U 352 D
 1050 B #50

1. MAKE THE 1418 OR 1428 READY -- PUT DOCUMENTS IN HOPPER, ETC. START THE PROGRAM AT 1040. CPU AND 1418/28 METER SHOULD RUN.
2. MANUALLY ACTIVATE ANY JAM MICROSWITCH. ONLY CPU METER SHOULD RUN.
3. START THE PROGRAM AT 1040. MANUALLY ACTIVATE END-OF-TRANSPORT SWITCH. ONLY CPU METER SHOULD RUN.
4. REMOVE DOCUMENTS FROM THE HOPPER. START THE PROGRAM AT 1040. ONLY CPU METER SHOULD RUN.

DATE	4/15/84							
ENG. CHG. NO.	120301							

-- L