FLOW CHART

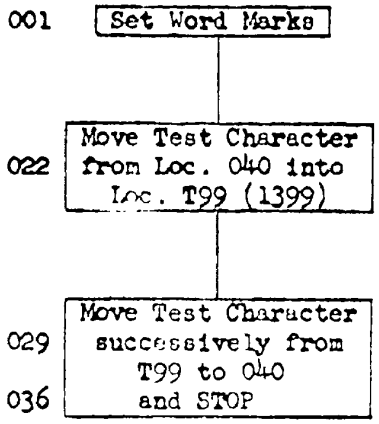

Testing without Using the Reader

The test can be conducted without using the reader by loading the following manually:

Inst. Addr.	INSTRUCTIONS OP	A	B	Remarks
029	M	?99	?98	The hundreds position (?) will vary depending upon the capacity of the machine tested.
036		029		Stop Op. Press Start Key to repeat.
040				Word Mark.
?99				Test character (1, 2, 4, 8, A, B, D, or G) without a word mark in the highest location.

After running the program, check for the test character in Location 040.