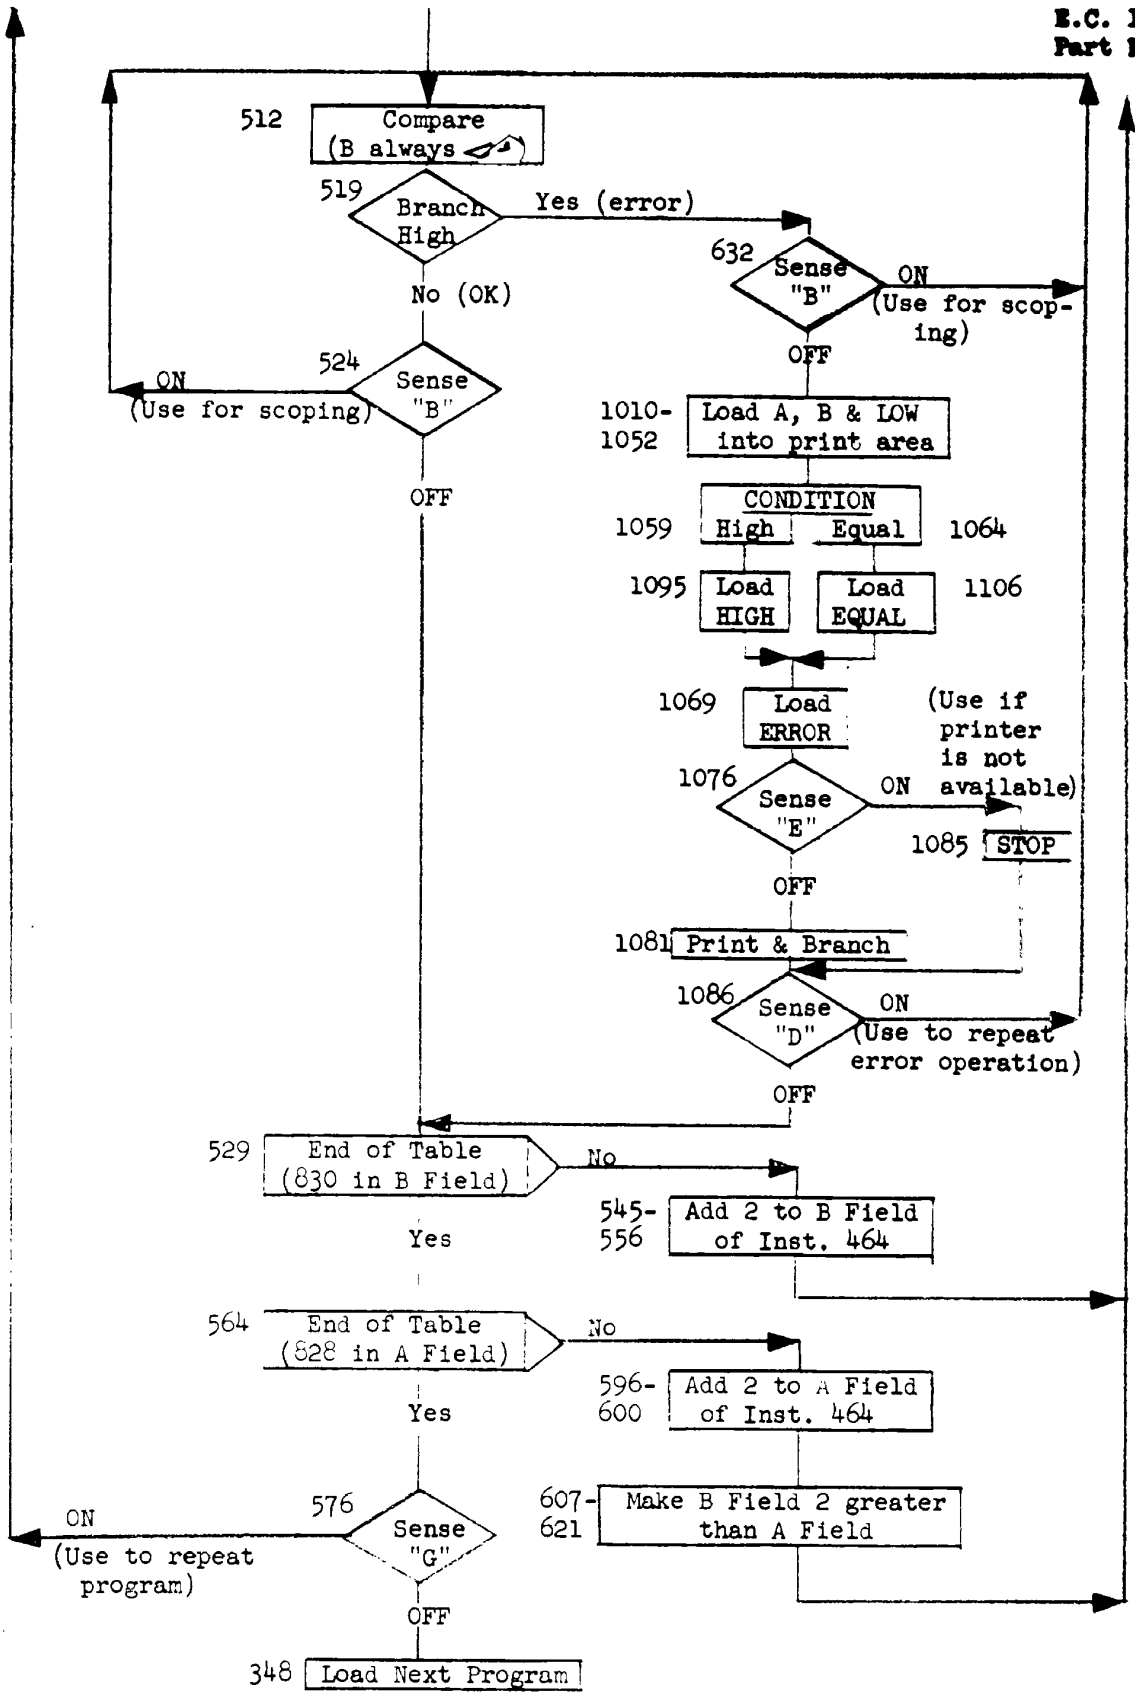
512
Compare
(B always <)
519
Branch High
Yes (error)
632
Sense "B"
ON
(Use for scoping)
OFF
No (OK)
524
Sense "B"
ON
(Use for scoping)
OFF
1010-1052
Load A, B & LOW into print area
CONDITION
1059
High
Equal
1064
1095
Load HIGH
Load EQUAL
1106
1069
Load ERROR
(Use if printer is not available)
1076
Sense "E"
ON
1085
STOP
OFF
1081
Print & Branch
1086
Sense "D"
ON
(Use to repeat error operation)
OFF
529
End of Table (830 in B Field)
No
545-556
Add 2 to B Field of Inst. 464
Yes
564
End of Table (828 in A Field)
No
596-600
Add 2 to A Field of Inst. 464
Yes
576
Sense "G"
ON
(Use to repeat program)
607-621
Make B Field 2 greater than A Field
OFF
348
Load Next Program

3300A-5