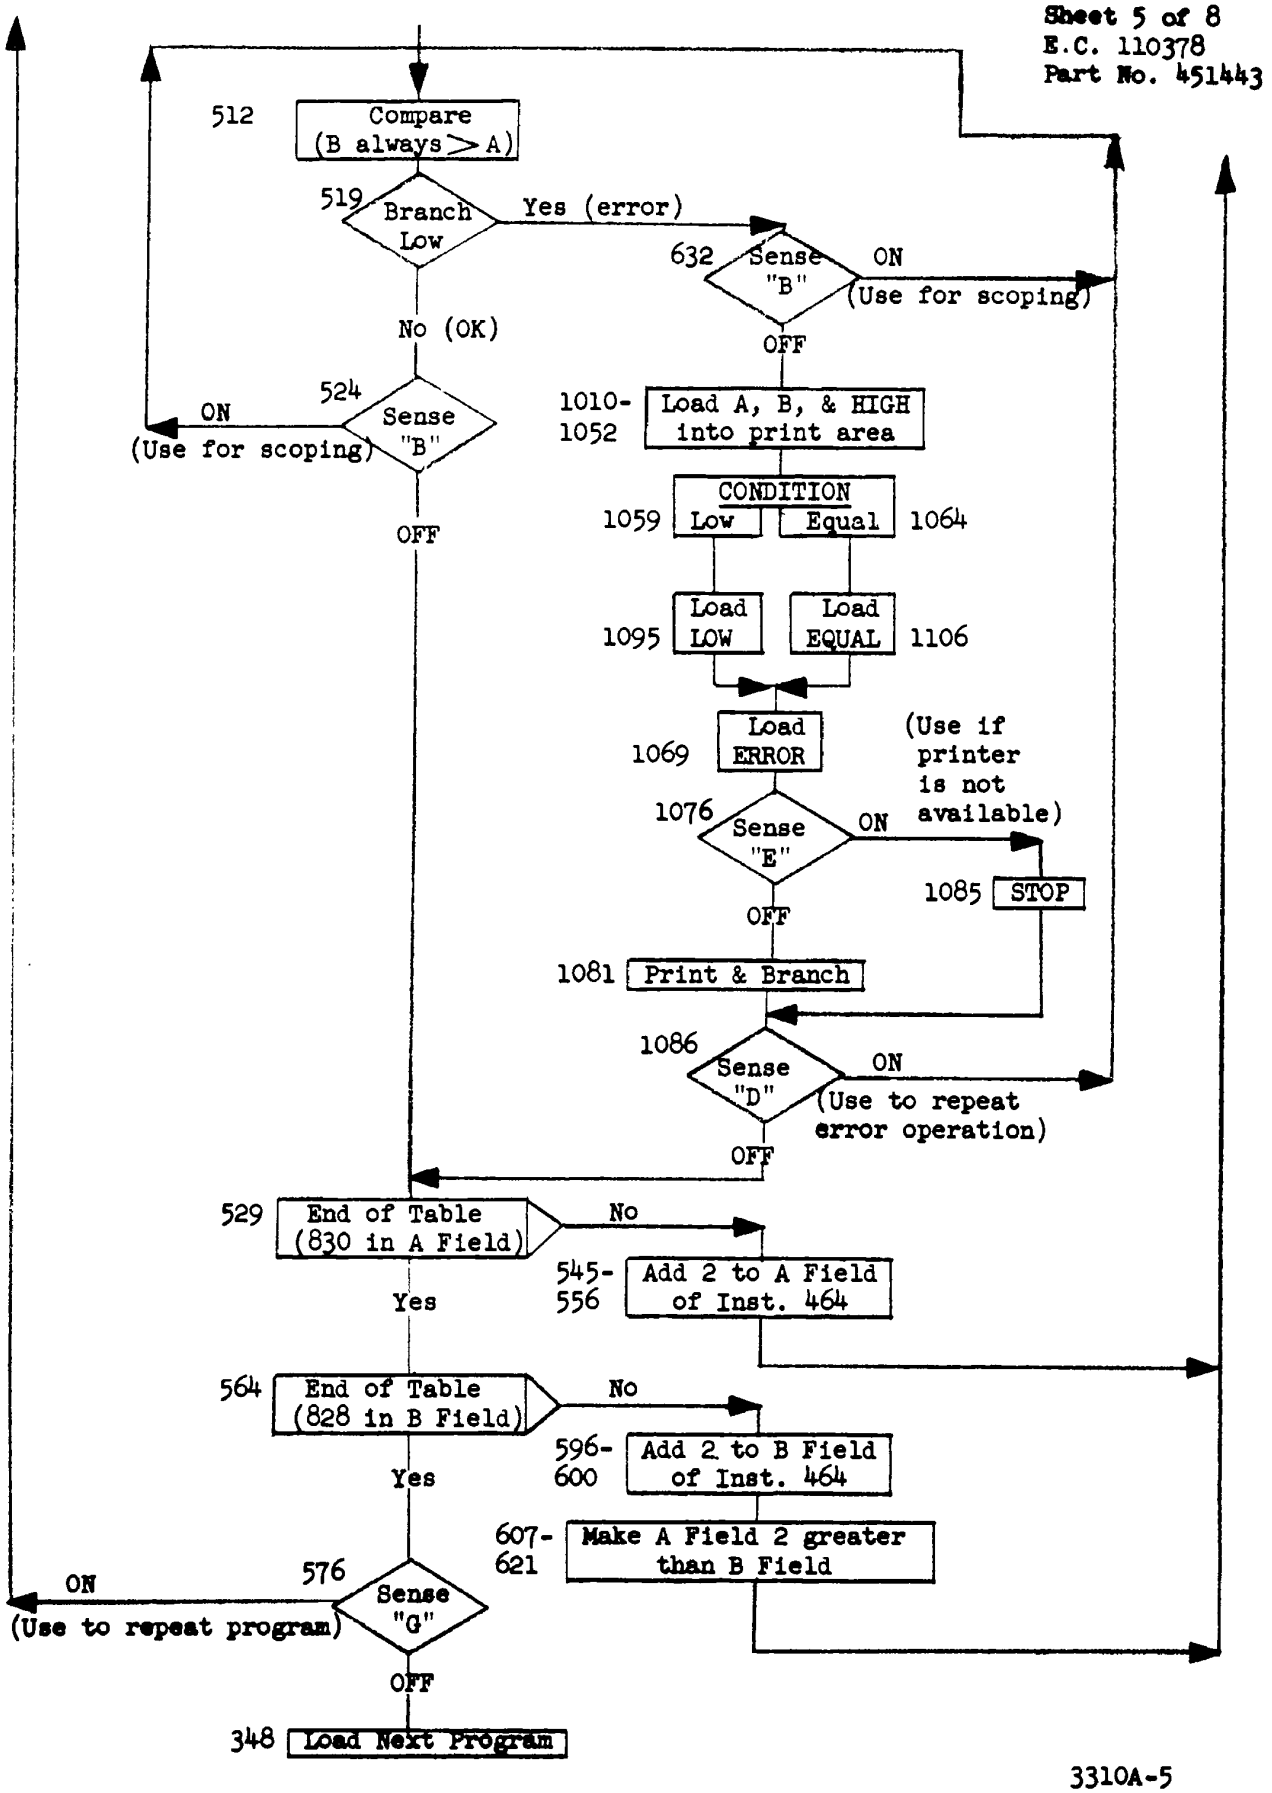
512
Compare
(B always > A)
519
Branch
Low
Yes (error)
632
Sense
"B"
ON
(Use for scoping)
OFF
No (OK)
524
Sense
"B"
ON
(Use for scoping)
OFF
1010-
1052
Load A, B, & HIGH
into print area
CONDITION
1059
Low
Equal
1064
1095
Load
LOW
Load
EQUAL
1106
1069
Load
ERROR
(Use if
printer
is not
available)
1076
Sense
"E"
ON
1085
STOP
OFF
1081
Print & Branch
1086
Sense
"D"
ON
(Use to repeat
error operation)
OFF
529
End of Table
(830 in A Field)
No
545-
556
Add 2 to A Field
of Inst. 464
Yes
564
End of Table
(828 in B Field)
No
596-
600
Add 2 to B Field
of Inst. 464
Yes
607-
621
Make A Field 2 greater
than B Field
576
Sense
"G"
ON
(Use to repeat program)
OFF
348
Load Next Program

3310A-5